

## PUBLIC MODE

## PRIVATE MODE

**LOCK**

USER  
CODE

USER  
CODE



Red LED flashes  
slowly whilst  
locked

**UNLOCK**

USER OR  
MASTER  
CODE



**UNLOCK**

USER OR  
MASTER  
CODE



**LOCK**

AUTOMATIC  
after 4 seconds

**CHANGE USER CODE**

LOGO KEY



OLD USER  
CODE



02



NEW USER  
CODE



NEW USER  
CODE



**ERROR**



Errors will time-out after 10 seconds.

Unfinished instructions will  
time-out after 10 seconds.

Always wait for LED lights to finish  
before pressing next key.